

Company Address

Date 8/5/2020
Quotation # Kansas 8/2020
Customer ID

Quotation For

FACE MASK - ADULT - WASHABLE

Quotation valid until: 8/31/2020
Prepared by: Rich Maynard

Shipping address (if different from above)

Comments or Special Instructions:

Salesperson	P.O. Number	Ship Date	Rebate program	Terms
		TBD	NA	Net 30 days

Quantity	Style (description)	Size	Finish	Cost each
800 - 50,000	6MAP0001-US-000	Adult - EARLOOP	WHITE	\$ 2.89
800 - 50,000	6MAP0001-US-102	Adult - EARLOOP	BLACK	\$ 2.89
800 - 50,000	6MAP0001-US-CHILD	CHILD - EARLOOP	WHITE	\$ 2.89

Freight	All freight is TBD and in addition to above <u>Cost</u>
----------------	--

If you have any questions concerning this quotation, please contact:

Rich Maynard

BGF/Porcher Industries

Sales Manager

Cell: 864-992-4436

[email: rmaynard@bgf.com](mailto:rmaynard@bgf.com)

FACE MASK HIGH QUALITY - WASHABLE

porcherindustries®

In the context of Covid 19 crisis, Porcher Industries has developed a non-medical washable and reusable face mask.

Person to person contact being the primary means of COVID19 transmission, the technical properties of our mask create an effective barrier against the spread of COVID19 through coughing, sneezing, yawning,...as it filters more than 90% of 3 microns particles even after 100 washing cycles.




WHERE TO USE OUR MASK



At work, when the contact with other people cannot be limited



During your leisure time, when the contact with other people cannot be limited

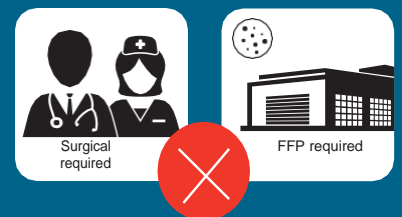

Our mask cannot be used in a medical or industrial environment as a protection against any type of dust

DURABLE AND EASY TO USE



Reusable and washable 100 times at 60°C
Material 100% polyester, high mechanical resistance
Quick-drying thanks to hydrophobic material
No shrinkage for consistent covering of the face
Comfortable to wear : weights only 15gr.
No ironing needed after washing and drying
Available in several colors
Packaging by 2 masks



QUALITY GUARANTEE



Compliant with the AFNOR S76-001 regulation for non-medical use
Production process monitored by highest quality management standards

In no event may the mask be a substitute for the protection barrier measures against virus.



REFERENCE : AFNOR Spec S76-001:2020 barrier masks - "Folds" type - UNS-1 class

- DESCRIPTION :**
- Non-medical mask, not intended for medical use
 - Washable mask composed of 3 layers of polyester fabrics
 - Designed according to the French AFNOR S76-001 specification

- CHARACTERISTICS :**
- High-tenacity fibers for improved durability
 - Hydrophobic fibers
 - Highly resistant to household and industrial laundering
 - No wash shrinkage thanks to a specific treatment during manufacturing
 - No Ironing required
 - Very light mask, approx. 15gr

PRODUCT PRESENTATION :



Non-contractual picture



PRODUCT DESCRIPTION :

		Specification		Measure
Properties		AFNOR S76-001	French Ministerial Briefing Note from March 29th 2020	Projections retention (1) (2) (3)
Air permeability (L.m ⁻² .s ⁻¹)	At depression 100Pa	>96	>96	112
Aerosol protection efficiency (%)	3µm particle	>70	UNS1 >90 UNS2 >70	91 UNS1
	1µm particle	N.A.	N.A.	N.A.

(1) Spray retention use: flow measured from the inside to the outside, at expiration.

(2) Complex performances were measured washed material. Data from the IFTH report 2020-04-07-007-100

(3) Measurement method according to DGA (French Armament Procurement Agency) protocol.

REFERENCE : AFNOR Spec S76-001:2020 barrier masks - "Folds" type - UNS-1 class**RECOMMENDATIONS :***USE*

The mask can be worn for a maximum of 4 consecutive hours.
After 4 hours, the mask should be washed immediately or stored in a specific bag.
In all cases, refer to paragraph 9 of the AFNOR S76-001 specification.

WASHING

Household washing with a complete cycle at 60°C, lasting a minimum of 30 minutes with a standard detergent.
Tumble dry.
This mask retains its UNS1 classification (Official French classification on non-sanitary mark) after 100 washes (cf. IFTH report n° 2020-04-07-007-100).

STORING CONDITIONS

Unused masks should be stored in a clean, dry place away from light.

PRECAUTIONARY MEASURES

Wearing the mask does not exempt you from applying barrier gestures.